 
 


A-H2

SERVICE MANUAL

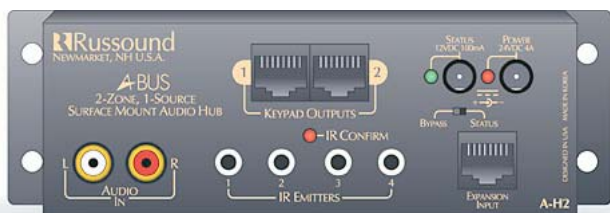

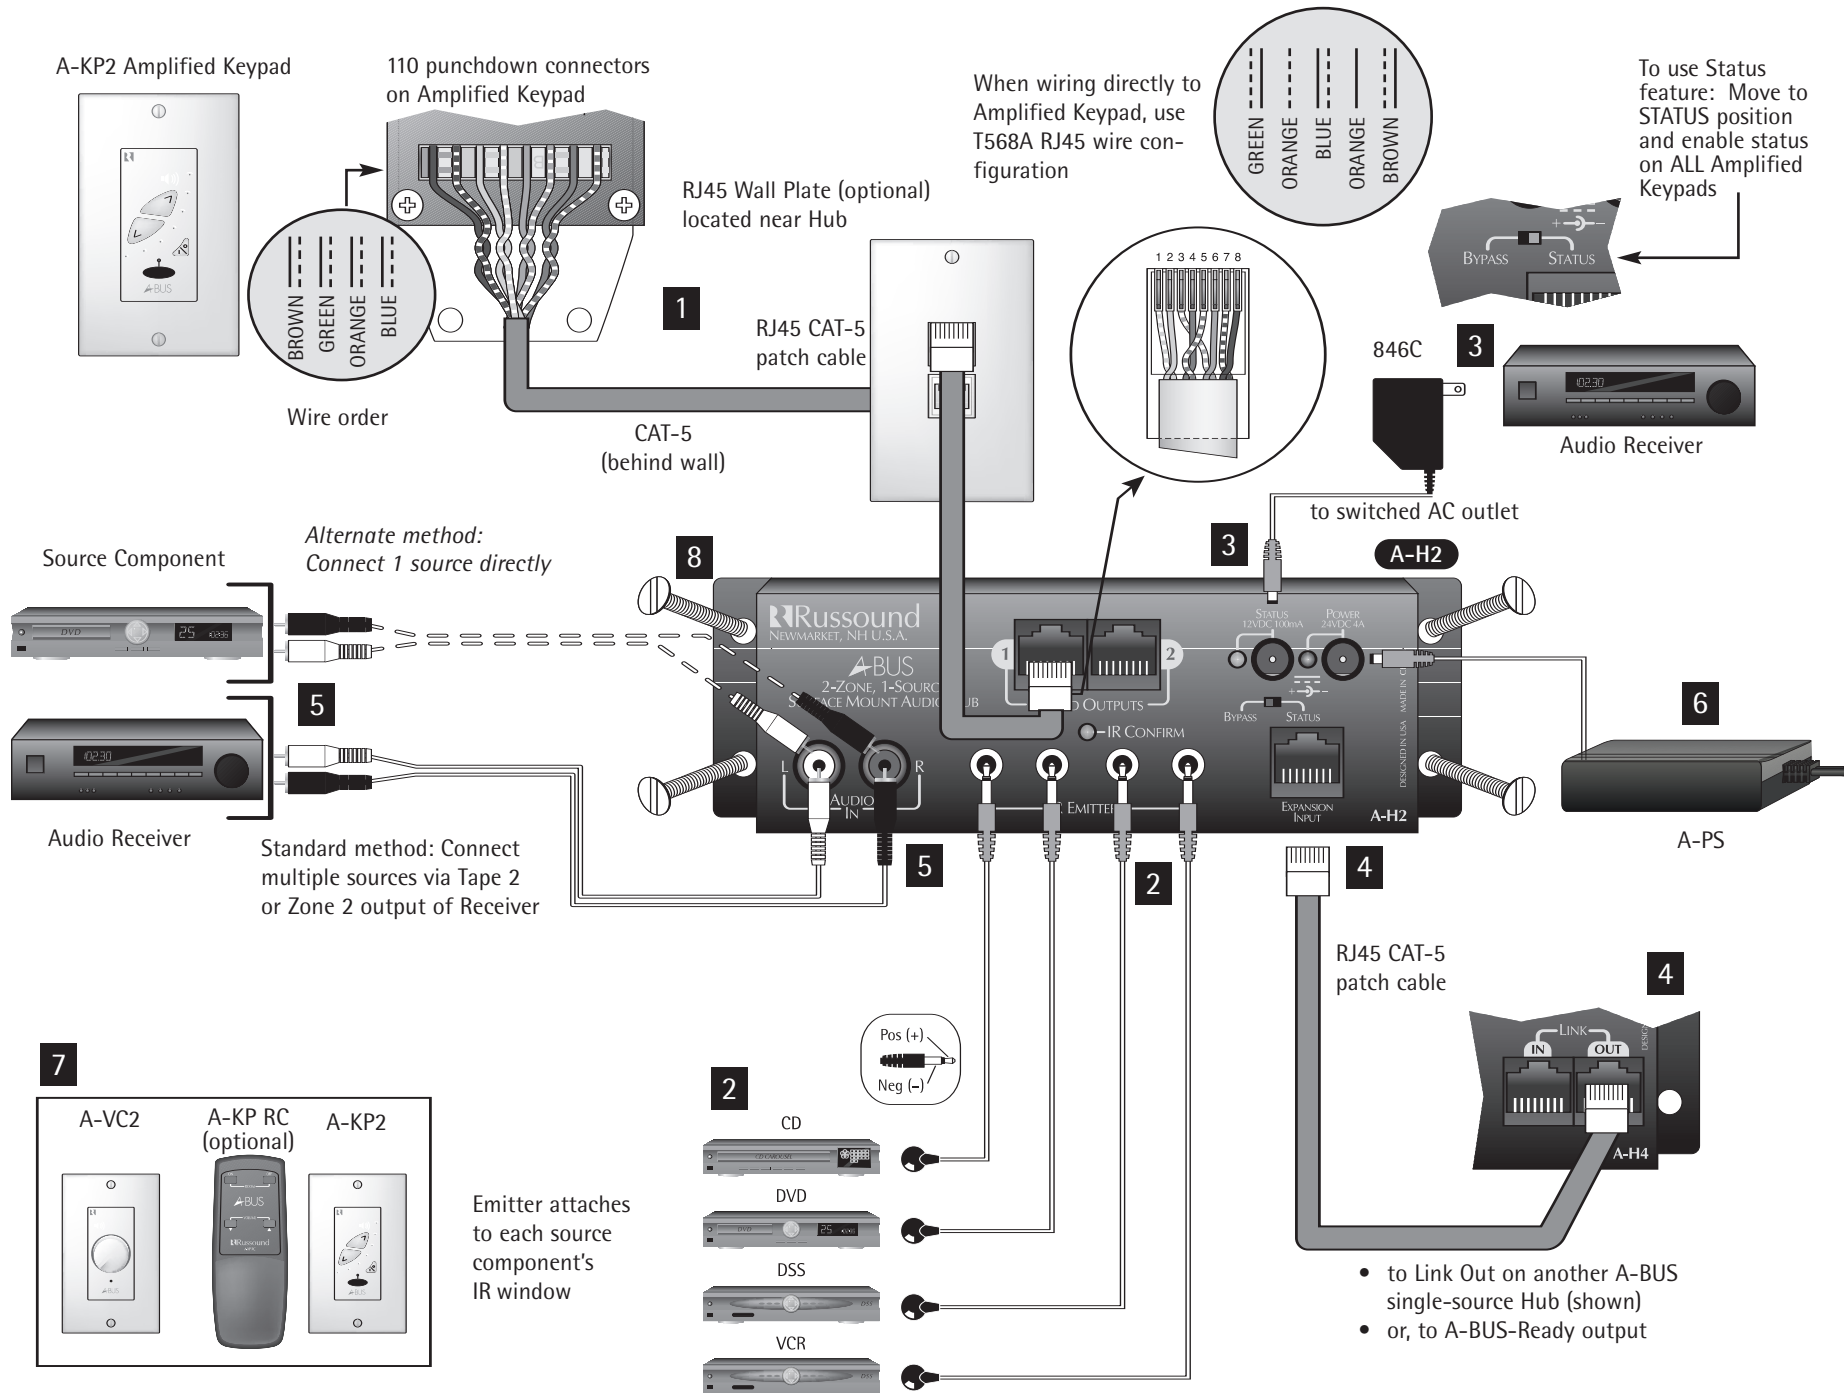

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance in the operating instructions should be adhered to.
4. Follow Instructions - All operating and user instructions should be followed.
5. Water and Moisture - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
7. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
10. Grounding or Polarization - Precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
11. Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, receptacles, and the point where they exit from the appliance.
12. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
13. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally; or
 - E. The appliance has been dropped or the enclosure is damaged.
14. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Precautions:

1. Power – WARNING: BEFORE TURNING ON THE POWER FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.
All models are designed for use with either AC120V, 60Hz or AC240, 50Hz voltages. The unit will autoswitch to either of these voltages.
2. Do Not Touch The A-H1 With Wet Hands – Do not handle the AH-1 or power cord when your hands are wet or damp. If water or any other liquid enters the A-H1 cabinet, take the A-H1 to a qualified service person for inspection.
3. Care – From time to time you should wipe off the front and side panels of the cabinet with a soft cloth. Do not use rough material, thinners, alcohol or other chemical solvents or cloths since this may damage the finish or remove the panel lettering.

INSTRUCTIONS FOR CONNECTING AND USING RUSSOUND MODEL A-H2. REFER TO THE DIAGRAMS INSIDE.

1 AMPLIFIED KEYPADS

Connect two (2) A-BUS Amplified Modules. A CAT-5 cable is used to connect each A-KP2 or A-VC2 Amplified Module to a keypad output on the A-H2 Hub. For clean installations, use RJ45 CAT-5 patch cables to connect from the Hub to an RJ45 Wall Plate (optional), and then wire from the Wall Plate to the Amplified Module (see diagram). The Amplified Modules have 110 punchdown connectors for the 8 individual conductors of the CAT-5 cable (use a punchdown tool with a 110 blade to insert conductors).

NOTE: When wiring directly to an Amplified Module (i.e., not using an RJ45 Wall Plate) use T568A RJ45 wire configuration.

2 IR EMITTERS

Common IR Outputs. Connect an IR emitter such as the 845.1 to each of the 4 IR connectors on the A-H2 (you need use only one IR emitter if you've connected a single source directly to the A-H2). The IR signal that is received through a zone's Amplified Module is routed to the A-H2's Common IR outputs. This allows remote operation of sources such as CD, DVD or DSS from each zone.

3 STATUS

The status feature provides two functions:

- Visually confirms when the source component is on
- When the source component is turned off, all Amplified Module will also turn off

The status feature requires that the source component has a switched AC outlet.

To enable the status feature:

- Move the status jumper on all Amplified Module to the "Enabled" position.
- Move the status switch on the Hub to the "STATUS" position.
- Using a Russound Model 846C 120V/12VDC or comparable adapter, connect the coaxial plug end to the STATUS input on the Hub, and plug the adapter into a switched AC outlet on the source component.

When the source is on and supplying status voltage to the Hub, the Amplified Module's LED indicator will illuminate green. When the source is turned off, all Amplified Modules that are on will also turn off (the A-VC2 will mute).

IMPORTANT: When the status feature is enabled, it must be used (i.e., supplied with power) in order to ensure proper operation with accessories such as the A-LC2 Local Source Input Module.

4 EXPANSION INPUT

The Expansion Input is used to connect the A-H2 with an RJ45 patch cable to other A-BUS single-source Hubs or to an A-BUS-Ready product to increase the number of rooms in a system. The Expansion Input connects the Common IR, Status, and the audio source signal. Single-source A-BUS Hubs such as A-H4, A-H2, A-H4P and A-H1 all use the same format for linking. The A-H484 multi-source Hub is different and cannot be linked to single-source Hubs in this manner.

The Link Out or A-BUS Ready Sub-Zone output of one device must be connected to the Link In (Expansion Input of A-H2) of the subsequent device.

NEVER connect the Link Out to another Link Out or A-BUS Ready output. This may damage the components and void the warranty.

Note: Each Hub in the chain requires its own A-PS power supply.

5 SOURCE

Although the A-H2 has only 1 audio input, it can be connected to multiple audio sources via the Tape 2 or Zone 2 output of a stereo or home theater receiver. Connecting to a receiver gives the A-H2 access to any audio source connected to that receiver. Alternatively, a single audio source can be connected directly to the A-H2.

6 POWER SUPPLY

The A-H2 Hub and Amplified Keypads are powered by the A-PS 24VDC/2.5A power supply. The A-PS should be plugged into an unswitched AC outlet (one that is live all the time). When the A-PS is providing power, the A-H2's POWER LED will illuminate.

7 OPERATION

A-KP2 keypads can be operated manually or by using the optional A-KP RC remote control. A-VC2 volume controls are operated manually using the rotary knob. If you installed IR emitters (see Step 2), then sources can be operated with their own remote control by aiming it at the IR window on an A-KP2 keypad.

8 MOUNTING

Mount the A-H2 near the source equipment using screws or hook and loop fastener.



Model A-H2
2-Zone Hub
for A-BUS System
Instruction Manual

A-BUS SYSTEM OVERVIEW

The product you have just purchased is an integral part of the Russound A-BUS Multi-Room Audio System. It is a component which, when combined with other essential components and your source equipment (receiver, CD player, etc.), creates a versatile whole-house audio system that will fill your rooms with high-quality sound for years to come.

A-BUS technology is a new, innovative method of providing high quality audio to remote locations with a single 8-conductor cable such as CAT-5. A-BUS technology provides many advantages over other methods of audio distribution, including: simple, single CAT-5 wiring scheme; infrared control of system components; infrared control of the optional A-KP2 amplified keypad module; and system power status.

Every A-BUS System is comprised of components from each of the following three areas.

1. **A-BUS Amplified Modules:** The Module contains both the amplifier for the room's speakers as well as the control for those speakers. One Module should be used for each room you choose to control. The Russound A-KP2 Amplified Keypad (with built-in IR receiver) and A-VC2 Amplified Volume Control are examples of A-BUS Amplified Modules.
2. **A-BUS Hubs:** All components of the A-BUS system must be wired centrally to a Hub located near your source equipment. The Hub provides the connection for source equipment, volume controls, infrared emitters and power supply. The A-H484, A-H4, A-H4D, and A-H2 are examples of A-BUS Hubs. The A-H484, A-H4, and A-H2 are surface-mount units. The A-H4D is an in-wall Decora® style unit.
3. **Power Supply:** The power supply plugs into the Hub. The Russound A-PS 24VDC/2.5A unit is an example.

All trademarks are property of their respective owners.



5 Forbes Rd. Newmarket, NH 03857, USA
Tel 603.659.5170 • Fax 603.659.5388
e-mail: tech@russound.com

A-H2 OVERVIEW

The A-H2 is an A-BUS 2-zone, 1-input audio distribution hub used with A-BUS Amplified Modules. The A-H2 can also be linked to other A-BUS Hubs (such as the A-H484) and to A-BUS Ready stereo receivers in order to increase the number of zones in a system.

IMPORTANT – Before installation, review the manuals included with each component in your system. If you are unsure of any of the installation procedures described herein or elsewhere, consult a professional electronics installer.

A-H2 KEY FEATURES


- 1) 1 source audio input
- 2) 4 common IR outputs, with confirmation LED
- 3) Status power input with LED indicator and selector switch
- 4) Power input with LED indicator
- 5) Expansion In
- 6) Compact size for mounting near audio equipment

A-H2 SPECIFICATIONS

Power Supply:	A-PS. 24VDC/2.5A
Status Power:	12VDC/100mA
Keypad Connection:	RJ-45 T568A Standard
Expansion Connection:	RJ-45 T568A Standard
Emitter Connections:	1/8" Male. Tip (+), sleeve (-)
Dimensions:	6.5"W x 2"H x 1.25"D (165x51x32mm)
Weight:	9.5 oz. (270g)

LIMITED WARRANTY

 The Russound A-H2 is fully guaranteed for Two (2) years from the date of purchase against all defects in materials and workmanship. During this period Russound will replace any defective parts and correct any defect in workmanship without charge for either parts or labor. For this warranty to apply, the unit must be installed and used according to its written instructions. If service is necessary, it must be performed by Russound. The unit must be returned to Russound at the owner's expense and with prior written permission. Accidental damage and shipping damage are not considered defects under the terms of the warranty. Russound assumes no responsibility for defects resulting from abuse or servicing performed by an agency or person not specifically authorized in writing by Russound. Damage to or destruction of components due to improper use voids the warranty. In these cases the repair will be made at the owner's expense. To return for repairs, the unit must be shipped to Russound at the owner's expense, along with a note explaining the nature of the service required. Be sure to pack in a corrugated container with at least 3 inches of resilient material to protect the unit from damage in transit. Russound sells products only through authorized Dealers and Distributors to ensure that customers obtain proper support and service. Any Russound product purchased from an unauthorized dealer or other source, including retailers, mail order sellers and online sellers will not be honored or serviced under existing Russound warranty policy. Any sale of products by an unauthorized source or other manner not authorized by Russound shall void the warranty on the applicable product.

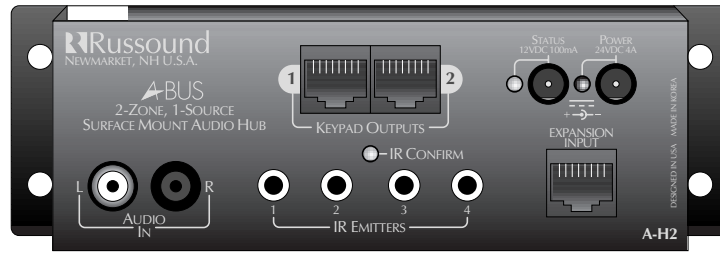

A-H2 TEST PROCEDURE

The purpose of this Test Procedure is to instruct both the Russound Test Department and any outside Service Technician.

Equipment Needed: CD Player

A-H2

A-H2 Instruction Manual

2 A-KP

A-KP Instruction Manual

A-PS

Speakers

845.1

846C Power Supply

A-KP RC Remote

MOD-RJ45CAT5 Connectors female

Patch Cable-Cat 5 (up to 350Mhz)

A-H4

A-H4 Instruction Manual

Inspection: Inspect Sheet Metal for scratches.

Inspect screening for correct labeling.

Set Up:

NOTE: REFER TO DIAGRAMS FOR ASSISTANCE WITH CORRECT SETUP.

1. Connect a CD player to Audio In on the A-H2.
2. Connect an A-KP (V- V+ ST IR L+ L- R- R+) using CAT 5 to an MOD-RJ45CAT5 female connector. Use standard T568A configuration to the RJ45 female connector (refer to Diagrams 1 for recommended wiring, PAGE 5).
3. Then attach the Patch Cable from the RJ45 female connector to the A-H2. (refer to Diagram 2, PAGE 6).
4. Connect the A-PS power supply to the A-H2.
5. Connect the 845.1 to one of the IR Outputs of the A-H2 and to the CD player.
6. Ensure the Bypass-Status switch is in the Status position.
7. Ensure the A-KP is the Status Override position.
8. Plug in the A-PS power supply to an AC outlet. Only the red power LED should illuminate on the A-H2.

Keypad Test:

1. ON/OFF – Turn on/off the Keypad by pressing the ON/OFF button on the front of the Keypad at the bottom right.
2. Connect the speakers to the Speaker Out (L+ L- R- R+) of the A-KP. Refer to Diagram 5, PAGE 4.
3. VOLUME UP/DOWN – Press the VOLUME UP/DOWN button on the A-KP the volume should increase/decrease. Ensure volume from both speakers goes up/down together.
4. Slide Bypass-Status switch to Bypass. The Status LED on the A-H4 should turn on. The Keypad should still be on.

5. Slide switch back to Status. The Status LED on the A-H4 should go out. The Keypad should be off.
6. Turn Keypad back on and continue through procedure.

Infra-Red control:

1. Control the CD player, using the CD remote and pointing it at the IR receiver on the Keypad.
2. Control the volume output by using the A-KP RC remote.
3. The IR Confirm LED on the A-H2 should always blink whenever an IR signal is being sent from any Keypad, whether volume for that zone or control of the equipment.

Keypad Outputs:

1. Move the patch cord attached to the A-H2 and A-KP to the other Keypad output.
2. Repeat Keypad Test and Infra-Red control for the Keypad.

Infra-Red Outputs:

1. With the Keypad in the last Keypad connection on the A-H2, by moving the 845.1 check each IR output on the A-H2 and ensure that the CD player can be controlled from the Keypad.

Status Test:

Status:

1. Disconnect the A-PS from the AC power strip.
2. Connect an 846C Power Supply to the 12V Status Port on the A-H2. Diagram 3.
3. Move the Status jumper on the Keypad over to the Status Enabled position (refer to Diagram 4 for correct position, PAGE 6).
4. Plug the 846C Power Supply to an AC outlet.
5. Plug the A-PS into the power strip. The Status LED on the Keypad should be green, the Status LED on the A-H2 should be green.
6. Turn on the A-KP.
7. Unplug the 846C from the A-H2. The Keypad should turn off. Both the Status LED on the Keypad and the A-H2 should go out.
8. Plug the 846C into the A-H2. The Status LED should turn on but the Keypad should still be off.
9. Unplug the A-PS and the 846C.
10. Attach a Patch Cable from Link Out on an A-H4 to Expansion Input on the A-H2. The A-H4 should be in the Status position.
11. Disconnect the CD from the A-H2 and reconnect at Audio In on the A-H4.
12. Attach a second Keypad to the A-H4, both Keypads should be in the Status Enabled position.

13. Move the A-PS and the 846C to the A-H4. The Status LEDs on the A-KPs, A-H2 and A-H4 should be on.
14. Turn both Keypads on. Audio should be heard on through first Keypad.
15. Unplug the 846C from the A-H4 both Keypads should go off.
16. Plug the 846C back into the AC outlet. All Status LEDs should turn back on.
17. Control the CD player from both Keypads with the remote.
18. Move the emitter from the A-H2 to an IR Output on the A-H4.
19. Control the CD player from both Keypads with the remote.

Status Bypass:


20. Disconnect the 846C Power Supply from the 12V Status Port on the A-H4.
21. Move switch on A-H4 to Bypass. All four Status LEDs should turn on.
22. Move the Status jumpers on the Keypads over to the Status Override position on the Keypads (refer to Diagram 4 for correct position, PAGE 6).
23. Turn on the A-KPs.
24. The Status/IR indicators should not be lit when the Keypad is in Status Override mode, unless the IR is being activated from a remote.
25. Slide the Bypass-Status switch to Status on the A-H4. The Keypads should go off.

ENSURE THE BYPASS-STATUS SWITCH ON THE A-H2 IS IN THE "BYPASS" POSITION WHEN PUT INTO INVENTORY. THIS IS VERY IMPORTANT.

THE TEST PROCEDURE IS COMPLETE.

Poe
12/10/01

 DIAGRAMS 1.

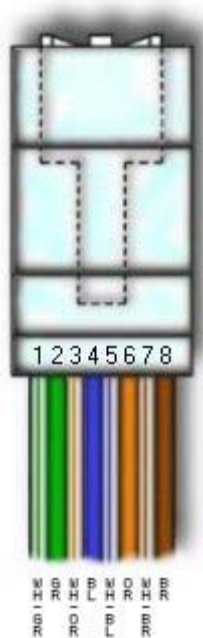


PICTURE OF THE END OF PATCH CORD. WILL NEED TO BE PLUGGED INTO MOD-RJ45CAT5 PLATEMATE CONNECTOR WHICH IS WIRED TO TEST KEYPAD AND A-BUS HUB.

T568A Wiring Chart		
Pin	Color	Signal
1	White-Green	T3
2	Green	R3
3	White-Orange	T2
4	Blue	R1
5	White-Blue	T1
6	Orange	R2
7	White-Brown	T4
8	Brown	R3

WIRING DIAGRAM ALSO WRITTEN ON SIDE OF MOD-RJ45CAT5 PLATEMATE CONNECTOR.

MOD-RJ45CAT5 PLATEMATE CONNECTOR. ATTACH KEYPAD TO THIS CONNECTOR FOLLOWING DIAGRAMS AT RIGHT USING WIRING CONFIGURATION T568A. WHEN LOOKING ON THE SIDES OF THIS CONNECTOR FOLLOW COLOR WIRING "A" PATTERN.

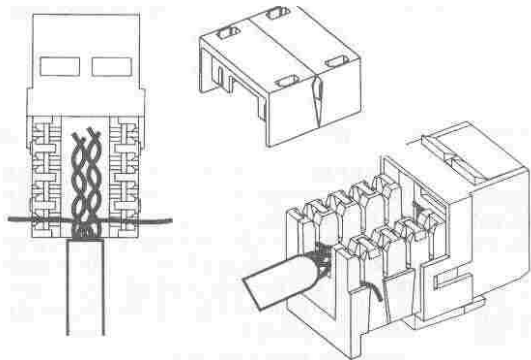 

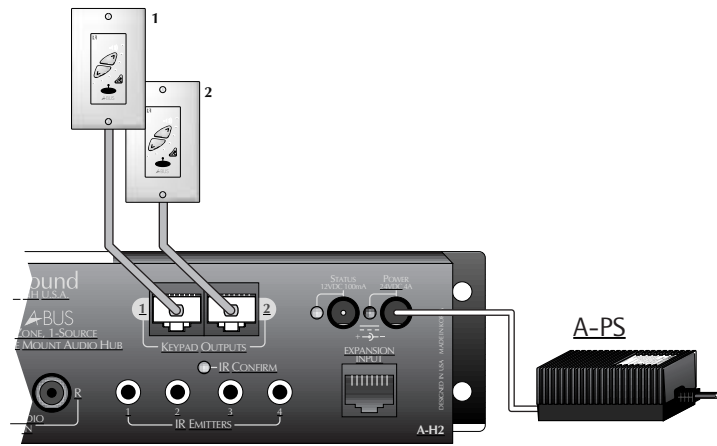 


DIAGRAM 2.

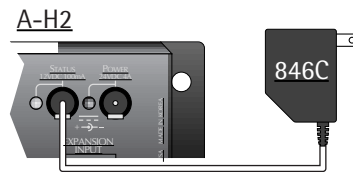 


DIAGRAM 3.

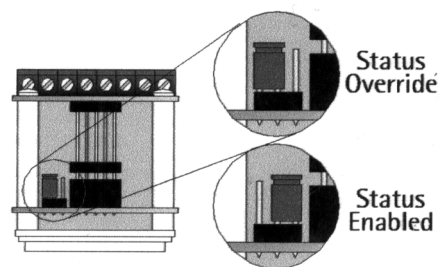 


DIAGRAM 4.

