




E-Series Owner's Guide

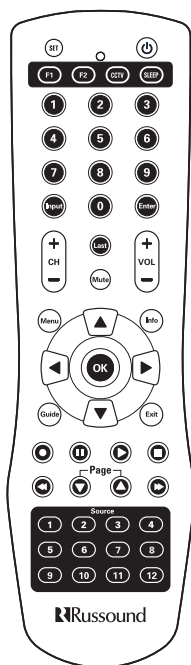

Introduction

The HHR-E5 Remote Control is designed for use with the Russound E-Series controllers and connected keypads in advanced RNET® systems. It controls up to 12 source components.

The HHR-E5 is a system remote only and does not support learning IR codes. This manual provides a basic overview on how to operate the HHR-E5.

Key Functions

Use the following Key Charts to learn how the HHR-E5 functions.

The LED (red light) blinks to show that the remote control is working and is sending signals.

Press PWR once to turn on or off the zone.

Use the keypad (0 ~ 9) to directly select channels (for example, 09 or 31).

Press MUTE once to turn sound off or on.

Press ENTER once after entering channel numbers on some cable or satellite boxes.

Use VOL + (or VOL -) to raise (or lower) the sound volume.

Use CH + (or CH -) to select the next higher (or lower) channel.

Press LAST once to recall the last channel.

Press INPUT to scroll through sources.

Use GUIDE to display the program guide.

Use EXIT to exit out of the selected component's menu or guide.

Use F1/F2 to select favorite presets.

Press RECORD then F1 or F2 button to save favorites.

Use the cursor keys to move the cursor in the program guide and menu screens.

Press to choose the highlighted menu option. Performs "Enter" function for devices.

For future use.

Use INFO to display current channel and program information.

Press MENU to access the menu of your chosen component.

Use the transport keys to control your components.

Use Page Up/Down with cable or satellite boxes.

For future use.

Use these keys to select specific sources.

Installing Batteries

- On the back of the HHR-E5, push the tab and lift off the battery cover.
- Obtain two (2) fully-charged AA alkaline batteries. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.
- Press the battery cover back into place. The tab should click when the cover is locked.
- Test the unit by pressing PWR and any key. If the batteries are inserted correctly, the LED will blink once.

Troubleshooting

PROBLEM: LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AA alkaline batteries.

PROBLEM: LED blinks when you press a key, but home entertainment component does not respond.

SOLUTION: Make sure the HHR-E5 is aimed at your controller system keypad and is not farther than 15 feet away.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press ENTER on the HHR-E5 after entering the channel number.

Additional Information

The HHR-E5 does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to the HHR-E5.