




KLK-E6 Screen Color Options


The KLK-E6 keypad features an option to change the color scheme of the display to suit your mood or decor. You can choose from seven colors: Default (dark blue), Pumpkin, Rose, Blue Sky, Forest, Lilac and Desert. When a new color scheme is selected, items on the display are shown in that color only (schemes cannot be combined).

To select a new color scheme:

1. From the Home screen menu choose "Settings."
2. From the Settings menu choose "Display."
3. From the Display menu choose "Screen Colors."
4. On the Screen Colors screen scroll to and select a color. The display will change to that color scheme.
5. To choose a different color, repeat steps 1-4.

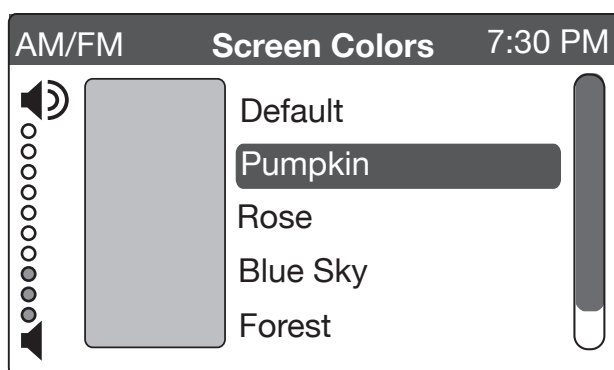

Screen Color Menu on KLK-E6

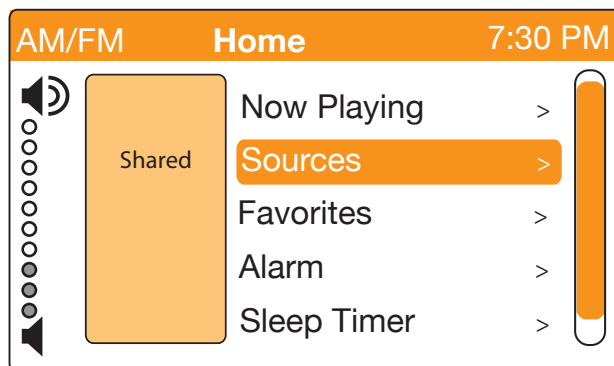

Example of Pumpkin Color Scheme on KLK-E6

Sphere Technical Support: 1-866-604-5245 M - F 8:30 a.m. - 7 p.m. EST



SPHERE™

Premier products for Russound-
SPHERE™ Certified Professionals

The Sphere Certified Integrator Program is a premium service program for experienced multiroom audio and video dealers. For more information on the Sphere program please visit www.russoundsphere.com

Russound

USA 603.659.5170
©2010 Russound. All rights reserved. All trademarks are the property of their respective owners. Specifications are subject to change without notice. Russound is not responsible for typographical errors or omissions. kaw 03/25/10

5 Forbes Road, Newmarket, New Hampshire 03857
www.russound.com