

About the KLK-E6

Welcome to the world of easy seek-and-find music control through the KLK-E6. This beautiful keypad features a color window into your world of music and video. The touch-sensitive wheel moves you through menus and lists with ease as you find, control and enjoy music and video from anywhere in the home. The KLK-E6 is built to make it easy for you to find and play music and video.

Key features

One-push control -- six backlit buttons for power on/off, music play/pause, volume up/down and a quick jump to menus

Find by menu -- all music sources and room setting arranged in easy-to-navigate menus and lists

Select button -- activates the selected item from a menu

Touch ring -- for scrolling through menus and lists, to navigate and make selections by pressing marked buttons on the wheel

LCD screen -- main window's Home screen is starting point for all selections. Shows system status and source information.

Remote control -- point the HHR-E5 remote at the keypad's "R" to make music adjustments from a distance

Favorites -- save and easily recall up to 32 favorite channels and stations from sources such as AM/FM / satellite radio tuners and cable boxes.

Alarm clock -- wake up to your choice of music or alarm

Sleep timer -- go to sleep to your favorite music and program your zone to shut down after you do

Party mode -- turns your house into one big room listening to the same music

Do not disturb -- tune out the rest of the world as you tune in to your music



Russound®



E-Series

Owner's Guide

©2009 Russound. All rights reserved.
All trademarks are the property of their respective owners.
Specifications are subject to change without notice.
Russound is not responsible for typographical errors or omissions.

Russound, Inc.
5 Forbes Road, Newmarket, NH 03857
tel 866.604.5245 • fax 603.292.8352
www.russoundsphere.com
28-1352 11/30/09

Click Wheel Keypad
KLK-E6

Premier products for Russound
Sphere™ Certified Professionals

Russound®

How do I?

Turn on the keypad

Press the power button to turn on the keypad and hear music. Press and hold the power button (when ON) to turn on all enabled zones. OR press Power on the HHR-E5 remote control.

Turn off the keypad

Press the power button to turn off the keypad and the music. Press and hold the power button (when OFF) to turn off all the keypads. OR press Power on the HHR-E5 remote control.

Choose music or video source

From the Home screen, scroll to and select "Sources." A list of available music sources appears. Scroll to and select a music source. OR use the numbered buttons under "Source" on the HHR-E5 remote control.

Play music or video

Each type of music or video source has its own menus and screens that list what is available to choose from, such as channels, genres, playlists, songs or artists.

Create presets

You can save presets for Russound tuner stations/channels. Select the tuner as the source, and tune to the desired station. From the tuner menu, choose a bank (1-6). Scroll to a preset, then press and hold the Select button to save.

Adjust the room's sound

From the Home screen, scroll to and select "Settings," and choose "Audio Settings." You'll see items to adjust, such as bass, treble and balance. Each selection has its own screen and shows levels for real-time adjustments.

For volume adjustments, press the Volume up/down buttons on the side of the keypad. OR press the VOL +/- button on the HHR-E5 remote control.

To mute the room's audio, press the Mute button on the HHR-E5.

What do these mean?

Shared


When you see "Shared" on the screen, what you are watching or listening to is also playing in another room.

DND

Stands for Do Not Disturb. Someone in another room has chosen a source and locked out anyone else from changing it. That room also won't be disturbed by paging or doorbell chime. To enable DND, choose DND from the Home screen and select On. To disable, select Off.

Party and Master

The keypad that shows Master has started a "party" and keypads that show Party are "attending." All rooms are listening to the same music, and only the Master can change the music.

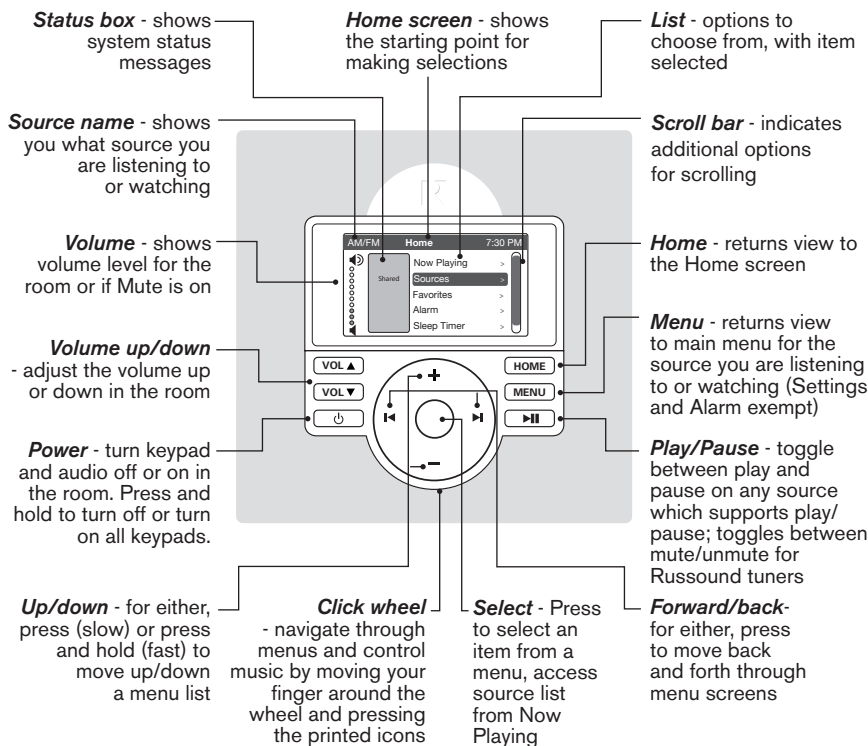

Using Party and Master

From the Home screen, choose Party Mode. Choose Master; now this keypad is in charge and all enabled zones will turn on. When the Master keypad turns Party Mode off, all zones turn off. You can transfer Master to another zone by choosing Master from that zone's keypad.

Favorites

You can save a source or a radio station/channel as a favorite. The Favorites menu is reached from the Home screen.

Add new

Tune to the music source you want to save as a favorite. From the Favorites menu, select Add new. Name the favorite using the wheel to move through the alphabet. When named, press the select button to save.

Edit name

From the Favorites menu, choose Edit Name. Choose the favorite to rename from the list and use the wheel to scroll through the alphabet and the forward button to move to the next character.

Delete favorite

From the Favorites menu, select Delete Favorite. Scroll to the favorite to be deleted, and press the select button to delete.

Alarm

You can set the keypad as an alarm clock and wake up to a buzzer or music. Start at the Home screen menu, then scroll to and select "Alarm" for the following options.

Alarm on/off

Activates alarm on or off.

Wake time

Set the time you want the alarm to go off.

Wake to

Choose the sound to wake you, the alarm buzzer, a music source or a programmed favorite.

Choose days

Set the alarm to go off on weekdays, all days or just once.

Set snooze

Choose to catch an extra 5 to 30 minutes before the alarm goes off again.

Alarm level

Set the volume of the sound to wake you.

To turn off active alarm

Press the power button on the keypad or HHR-E5 remote.

To snooze

Press the pause button on the keypad or the HHR-E5 remote.